

Visor Adjustment File

Loosen Both Screws (**DON'T TAKE OFF**) through the adjustment fitting visor on one side. Push back the visor onto the Helmet as Arrows onto visor Seal and Re-tighten.



Repeat the process on the other side until visor is tight to Helmet seal.. The customer can easily take off the visor and move the clutch plates to the rear of the helmet to get the same result without the adjustment visor. The adjustment visor allows for speed of adjustment.