



Click Red TAB to OPEN position. 0



Turn Clutch Plate towards front chin and rotate down quarter turn.



Put fingers behind Visor and pull. The assembly will pop off, as shown below






Do exactly the same for the opposite side and remove Visor



To replace visor pull over housing using purchase from internal part to align. Once clipped in position replace clutch Housing



Fit Clutch Housing and turn up and away from Chin part.

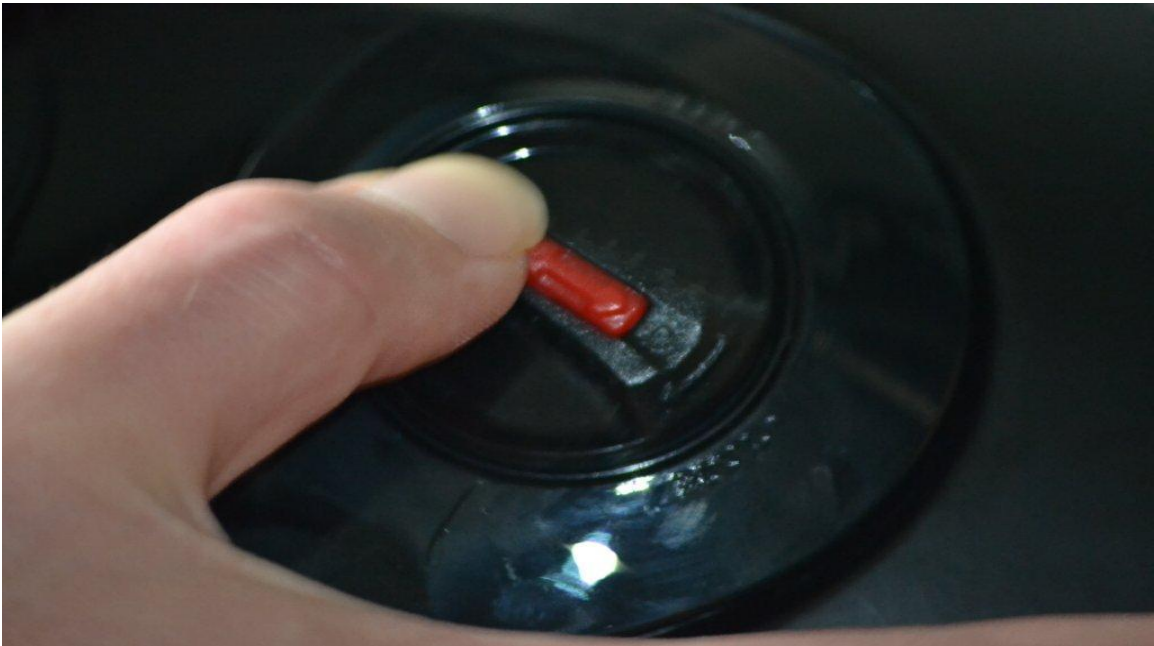

Once in place Lock Clutch place with Red Tab.